



BCI00EH-SS

# DOLPHIN BABY CHANGING TABLE WITH STAINLESS STEEL COVER

---

INSTALLATION INSTRUCTIONS

# WARNING

---




- › Failure to follow these warnings and the installation instructions could result in serious injury or death.
- › Read all instructions before installing baby changing station. Keep these instructions. **DO NOT** discard.
- › Designed for Infants Only. Age up to 3.5 years and weighing less than 50 lbs.  
Keep One hand on the child at all times.

# ASSEMBLY INSTRUCTIONS

---

- › **ADULT INSTALLATION REQUIRED. TOOLS REQUIRED:**
  - › Level (A)
  - › Measuring tape (B)
  - › Power drill with 5.56 mm, 3.18 mm and 12.7 mm masonry bits (C)
  - › Power screwdriver with bull nose phillips bit (D)
- › READ ALL INSTRUCTIONS BEFORE ASSEMBLY OF Changing Table.
- › Unpack carton and identify all parts.

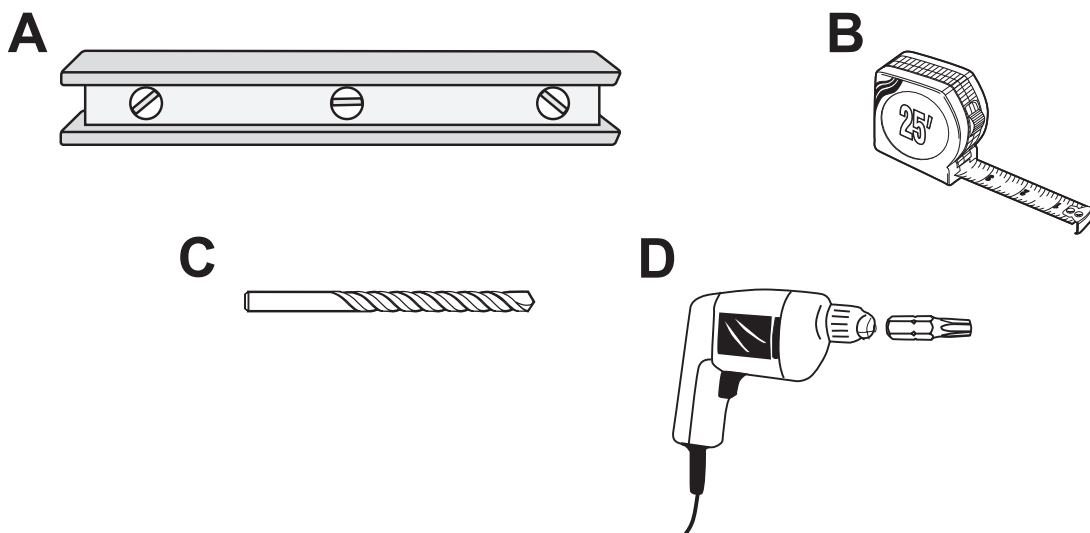



# PARTS LIST

| Parts Description                 | Quantity |
|-----------------------------------|----------|
| <b>Hardware for installation:</b> |          |
| 76.2 mm Wood Screws               | 4        |
| 19.05 mm Finishing Washers        | 4        |
| 76.2 mm Machine Screws            | 2        |
| 19.05 mm Flat Washers             | 4        |
| Toggle Anchors                    | 2        |
| 31.75 mm Caps                     | 6        |
| Door / Wall Plate                 | 1        |


For Wood Studs:



For Use With Toggle Anchors:

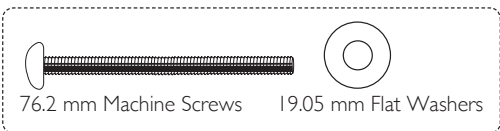

Door / wall plate to be mounted on outside of washroom door.

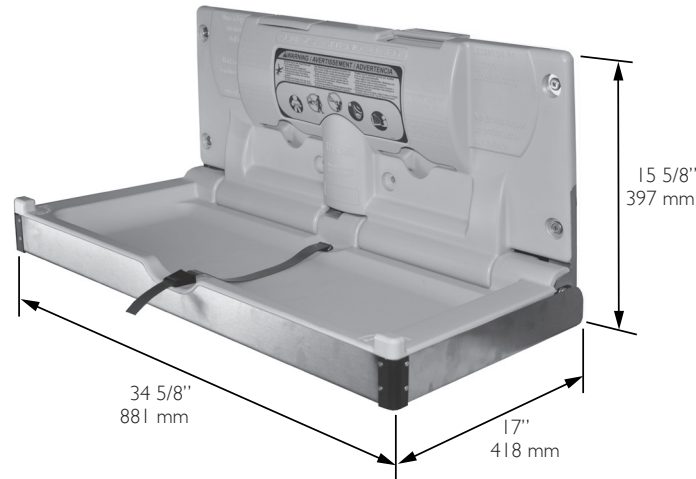

A.D.A. Compliance:



- 306.3 Knee Clearance
  - 307.2 Maximum Protruding Objects
  - 308.2 Forward Reach
  - 308.3 Side Reach
  - 309.4 Operation
  - 902.3 Work Surface
- Compliant when properly installed.

# INSTALLATION



## WARNING

- › A stud **MUST** be located and used for at least one side of the baby changing station.
- › The baby changing station is no stronger than the anchors or walls to which they are attached and, therefore, **MUST** be firmly secured in order to support the weight they are intended to support. Contact an architect or building contractor if any questions.


1. Locate wood stud where left side of changing station will be mounted to the wall.
2. Measure up 1143 mm (114 cm) from the floor and mark the wall. This locates the position for the top left attachment hole.

**NOTE:** Mark on wall **MUST** be in center of wood stud.

3. Align hole in top left corner of changing station with mark on wall and hold in place.
4. Using a level and measuring tape, mark the remaining three (3) holes. After marking holes set changing station down on ground.
5. Use a power drill and appropriate bit to drill four (4) holes in the wall. This may require 2 people.


### NOTE 1: For wood studs:

- › If wall surface is tile or masonry over wood studs, use a 5.56 mm masonry bit for the pilot hole until you hit the wood stud, then change to 3.18 mm bit.
- › Use wood screws, washers and washers (**Fig. a**).

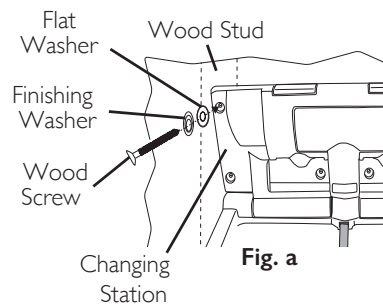

### NOTE 2: For use with toggle anchors:

- › If wall surface has wood studs that are not 406.4 mm on center, has metal studs, or has an underlying surface of concrete block use 12.7 mm bit.
- › Use machine screws and washers (**Fig. b**).
- › For holes NOT located in a wood stud, toggle anchors **MUST** be used (**Fig. c**). See “Using Toggle Anchors” section.

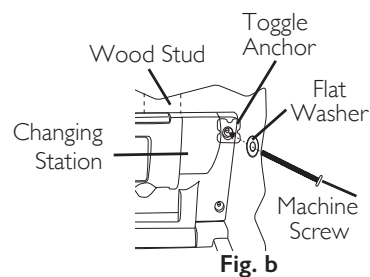

**Fig. c**

6. Align holes in changing station with drilled holes and secure top left corner of changing station to wall stud using the appropriate screw and washer. Continue to secure the three (3) remaining corners using the appropriate screws and washers as described in **Note 1** or **Note 2**.



## WARNING

› All 4 of these locations **MUST** be used for safe installation.


The lower holes ensure installation through the metal brackets.



7. Ensure all four (4) screws are tight and snap caps over screw heads.

### Using Toggle Anchors:

1. Insert metal end of toggle anchor into 12.7 mm hole.
2. Slide zip strip down snugly against wall.
3. Snap off break-away pieces of toggle anchor (**Fig. d**).
4. Align holes in changing station with toggle anchors and secure top left corner of changing station to wall using machine screws and washers. Continue to secure the three (3) remaining corners using machine screws and washers.
5. Ensure all four (4) screws are tight and snap caps over screw heads.

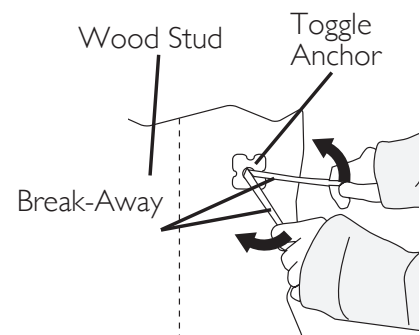

**Fig. d**

## RECOMMENDED BLOCKING:

If the walls do not have studs on center, then additional blocking is necessary (**Fig. e**).


Contact an architect or building contractor to make sure the blocking is adequate and complies with building codes.

## OPERATION:


Rotate base downward. Place infant on top of the changing surface. Use restraint system as described below. After child has been changed, remove restraint system and rotate base back against the wall.

## USE OF RESTRAINT SYSTEM:

Place child so restraint strap is located at abdomen. Rotate top of buckle upward and insert strap in buckle. Pull strap through buckle until snug against infant. Rotate top of buckle downward to lock the strap into place. Slide red locking tab over top of buckle (**Fig.f**). Reverse steps to loosen strap

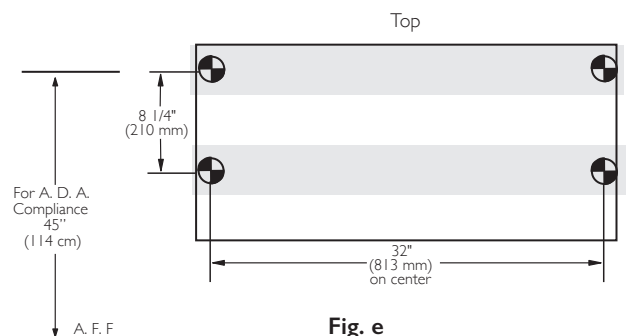

**Fig. e**

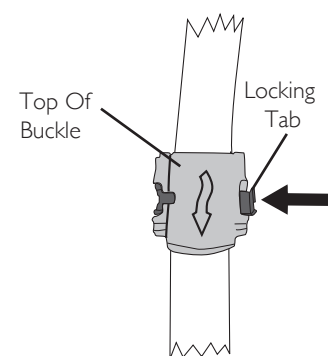

**Fig. f**

# MAINTENANCE AND CLEANING

---

Check all hardware and components monthly or as required to ensure hardware is tight and there are no missing or damaged components. Take unit out of service if any component is missing or damaged and contact customer service to order replacement parts. Do not substitute parts.

For replacement parts, contact customer service at +44 (0) 1424 202224.

Clean by using a damp cloth with mild soap or mild multi-purpose cleaner. Do not use any strong chemical cleaners or cleaning agents that may be hazardous to children.

# BACKER PLATE MOUNTING SYSTEM



## WARNING

- › Child should never be left unattended.
- › Avoid serious injury from falling or sliding out. Always use restraint system.
- › Adding excessive weight such as parcels, packages, or accessories to the unit or to the bag hooks that exceed the total weight limit of 50 pounds (22.7 kg) may cause the unit to be unstable or may cause a hazardous unstable condition to exist.

## Using Backer Plate Mounting System:

If your changing station was supplied with a backer plate, please follow these instructions. If a backer plate was not supplied and you would like to order one, see information on page 1.

The backer plate is designed to enhance the attachment method to ensure that at least one wood stud is used to support the changing station.



## WARNING

- › A stud **MUST** be located and used for at least one side of the baby changing station.
  - › The baby changing station is no stronger than the anchors or walls to which they are attached and, therefore, **MUST** be secured in order to support the weight they are intended to support. Contact an architect or building contractor if any questions.
  - › Use backer plate mounting system with at least four (4) standard mounting screws.
- The backer plate alone is NOT a secure attachment method.**



1. Locate wood stud where left side of changing station will be mounted to the wall.
2. Measure up 1143 mm (114 cm) from the and mark the wall.

**NOTE:** Mark on wall **MUST** be in center of wood stud.

3. Using two (2) 76.2 mm wood screws and a level, mount the backer plate to the center of the wood stud (**Fig. g**).

**NOTE:** The lip of the backer plate **MUST** be facing away from the wall (**Fig. h**). Repeat steps to secure backer plate to another stud on the opposite side.

4. Slide recessed area on back of changing station onto lip of backer plate.
5. Return to installation step 5.

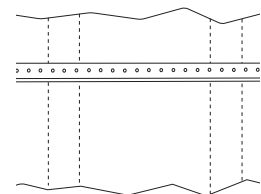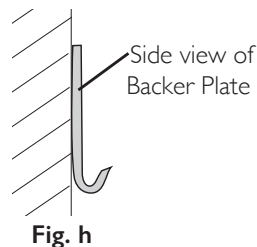

**Fig. g**



Dolphin Solutions  
Southpoint, Compass Park,  
Junction Road  
Bodiam, TN32 5BS,  
United Kingdom

T +44 (0) 1424 202 224  
[specifications.uk@dolphinsolutions.com](mailto:specifications.uk@dolphinsolutions.com)  
[dolphinsolutions.com](http://dolphinsolutions.com)  
© Dolphin Solutions

