




PAPER TOWEL DISPENSER & WASTE BIN

09.3010

DIMENSIONS

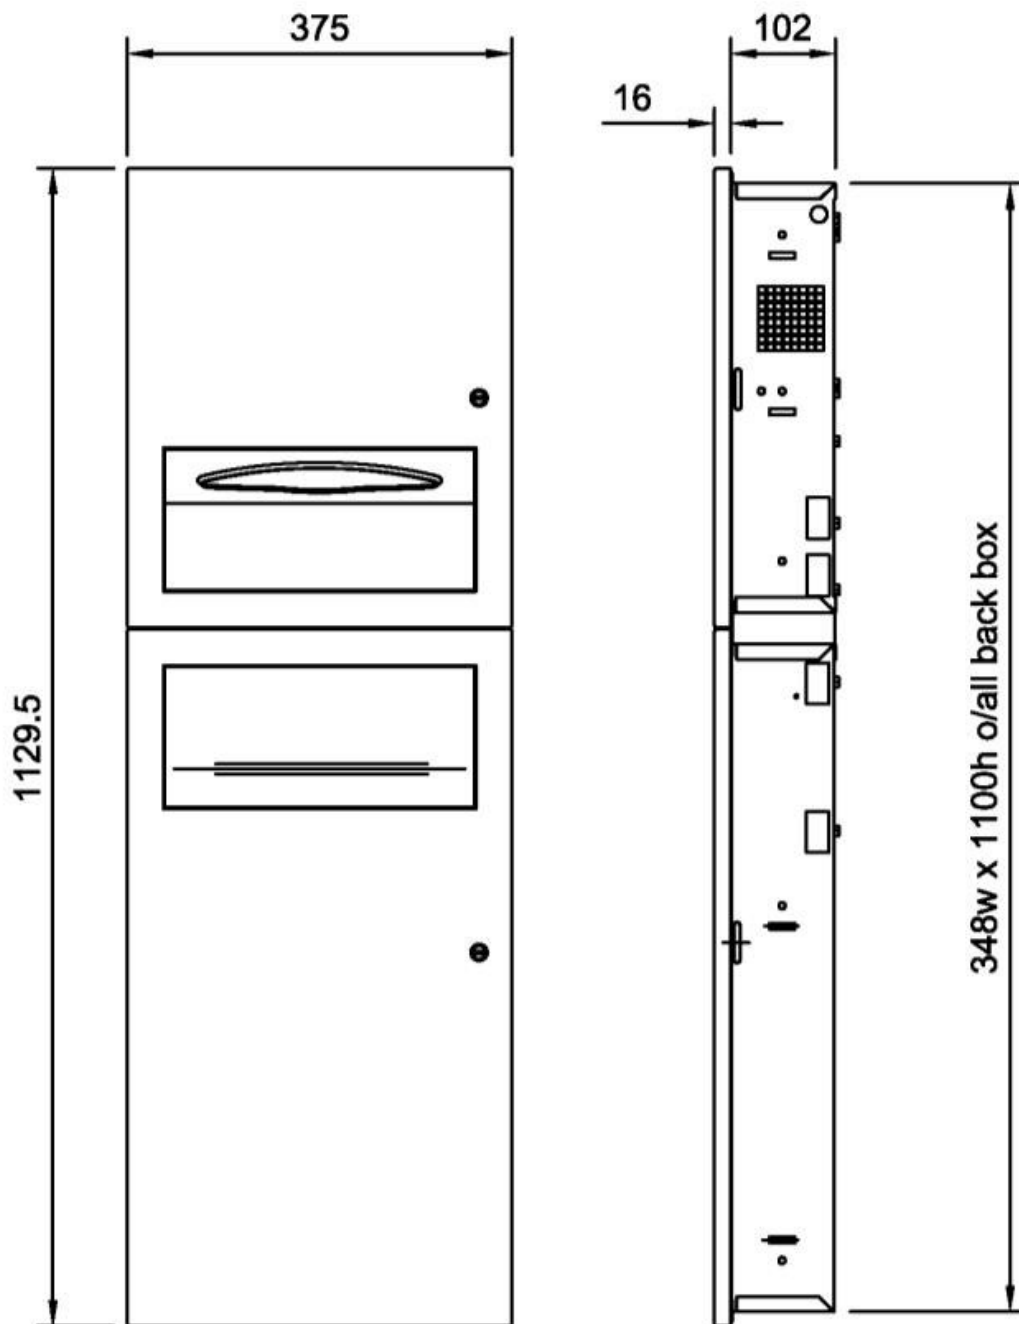

SPECIFICATION

Recess mounted modular paper towel dispenser and waste paper bin. Model number 09.3010 with flush mounted locks, vertically brushed satin finish stainless steel doors, chutes and stainless steel back boxes and bin.

N.B. For surface mounted version order **09.3410**

CAPACITY

Paper Towels:	Length mm (min-max)	Width mm (min-max)	Quantity
'C' Fold	225-250	90-105	200
Interleave	215-250	80-105	300

WASTE BIN CAPACITY

- › 10 litres

OPERATION

Paper towel dispenser holds and dispenses 200 'C' fold or 300 interleave paper towels. Flush mounted lock secures hinged door panel, which opens for refilling.

MATERIAL

- › Doors: 1.2mm satin finish stainless steel grade 1.4301 (304) to BS EN 10088-1
- › Chutes: 0.7mm satin finish stainless steel grade 1.4301 (304) to BS EN 10088-1
- › Bin: 0.7mm stainless steel grade 1.4301 (304) to BS EN 10088-1
- › Back boxes: 0.9mm stainless steel grade 1.4301 (304) to BS EN 10088-1
- › Approximate unit weight: 15kg

EMPTYING OF BIN

The bin can be accessed opening door with key supplied.

Open door, slide bin forward and remove from guide rails, fit suitable bin liner. Push bin back over slide rails into back box void and shut door.

INSTALLATION

- › Recommended wall opening of 360w x 1112h x 112d
- › Recommended mounting height from underside of unit to FFL 315mm (Male Toilet).
- › Open doors with key provided
- › Position the unit into the prepared wall recess allowing a 6mm clearance all round for packing and adjustment
- › Fit temporary screws into the rectangular slots on the side walls (Do not over tighten, to allow for horizontal adjustment)
- › Fix casing to studwork using suitable screws (Fixing holes Ø6.5mm) and remove temporary screws from slots
- › Lock front covers

SPARES

Contact Dolphin Solutions for spares requirements: specifications.uk@dolphinsolutions.com

CARE AND MAINTENANCE

Clean with soap and warm water, dry with a clean soft cloth.

To maintain finish use any industrial steel cleaner, polishing along the material grain with a clean soft cloth.

Dolphin Solutions recommends “Steel Clean” cleaning agent, obtainable from: Vitopan (Tel: 01204 863000)

**Never Use Corrosives - such as bleach or other cleaning products containing hypochlorite;
Any form of acid solution or industrial cleaning solution; Bathroom cleaning products,
developer liquids, concentrated disinfectants, strong alkalis or caustic soda;
Never Use Abrasives - such as wire wool; scouring pads;
Caution - Never use dirty or grit contaminated cleaning sponges or cloths**

WARRANTY

This product is covered by a 12-month warranty from the date of purchase to be free from defects if installed and maintained in accordance with these instructions. Dolphin Solutions will replace or repair (as appropriate) free of charge any product with a proven manufacturing defect if reported within the warranty period.