




## PAPER TOWEL DISPENSER & WASTE BIN

---

09.3010.1x

DIMENSIONS

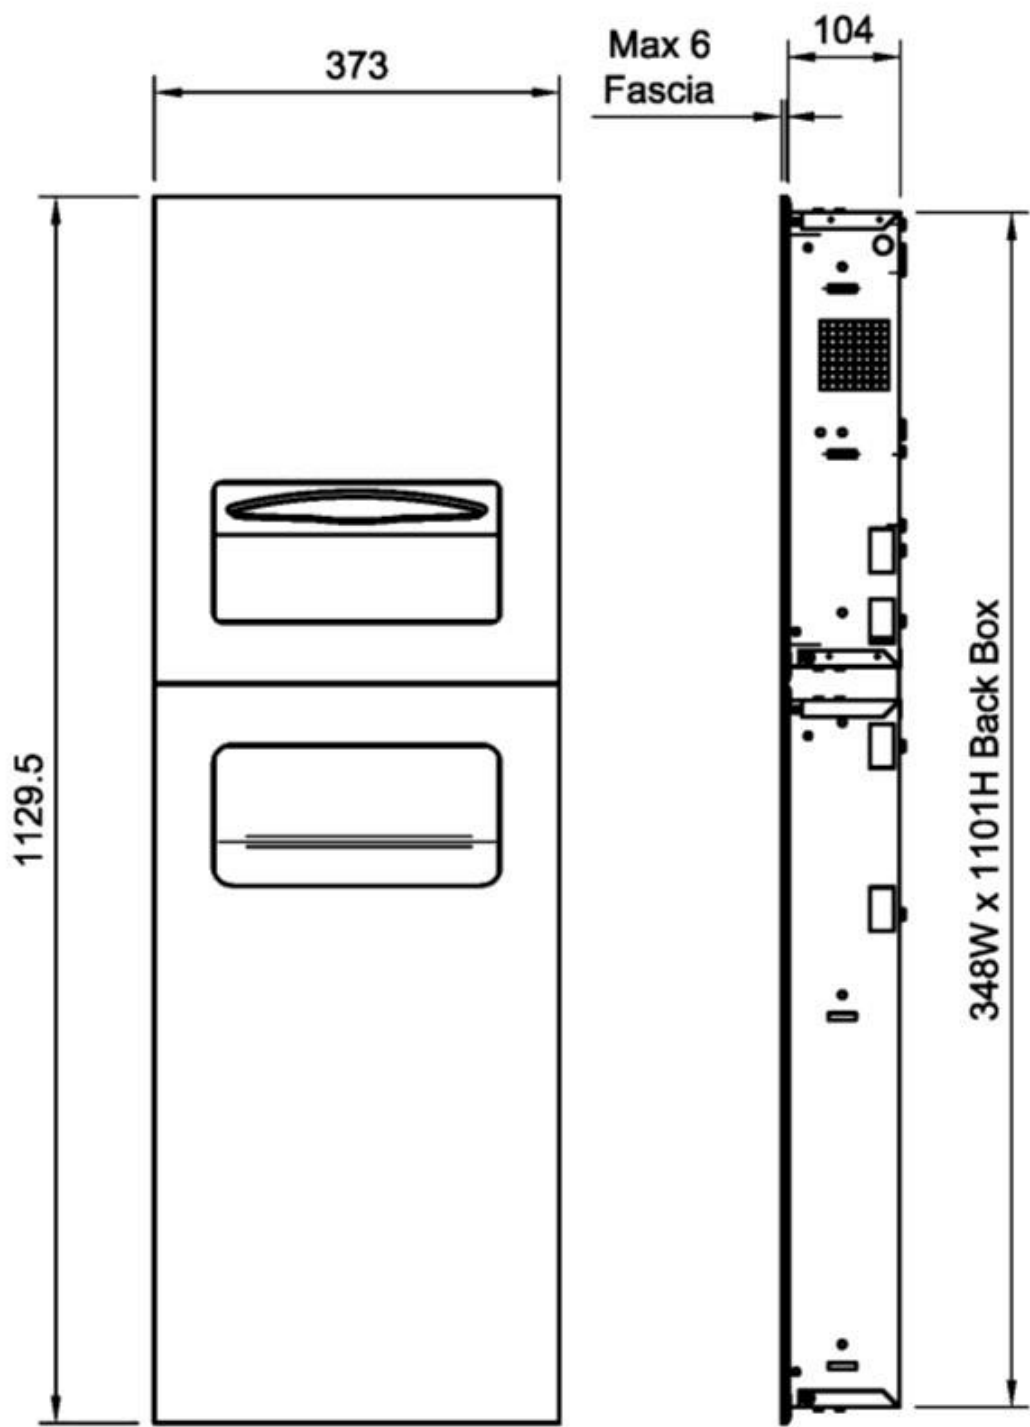

## SPECIFICATION

---

Recess mounted glass faced paper towel dispenser and waste bin. Model number 09.3010.1x.\* with right hand hinged glass door, vertically brushed satin stainless steel towel chutes and stainless steel back boxes.

**N.B.** For surface mounted version order **09.3410.1x.xx**

## MATERIAL

---

- › Door Fascias: 6mm toughened glass to BS EN 12600 (Glass any colour/image of your choice) and stainless steel backed
- › Chutes: 0.7mm satin finish stainless steel grade 1.4301 (304) to BS EN 10088-1
- › Back boxes: 0.9mm stainless steel grade 1.4301 (304) to BS EN 10088-1
- › Bin: 0.7mm stainless steel grade 1.4301 (304) to BS EN 10088-1

## CAPACITY

---

| Paper Towels: | Length mm (min-max) | Width mm (min-max) | Quantity |
|---------------|---------------------|--------------------|----------|
| 'C' Fold      | 225-250             | 90-100             | 200      |
| Interleave    | 215-250             | 80-100             | 300      |

## WASTE BIN CAPACITY

---

- › 10 litres

## OPERATION

---

Paper towel dispenser holds and dispenses 200 'C' fold or 300 interleave paper towels. Hinged door panel with hidden catch, which opens for refilling.

The bin can be accessed by placing suction cup (supplied) on left hand side of door face and pulling open.


## EMPTYING OF BIN

---

Open door, slide bin forward and remove from guide rails, fit suitable bin liner. Push bin back over slide rails into back box void and shut door.

## INSTALLATION

---

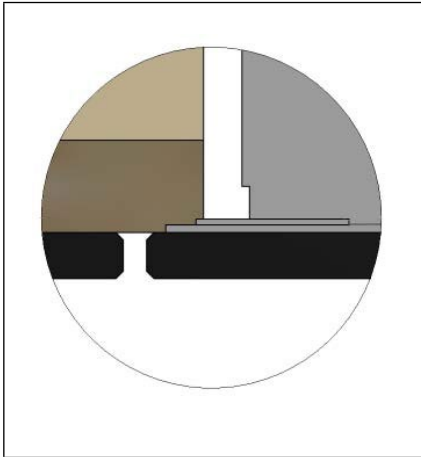

### **Flush mounting: Installation scrap section view for illustrative installation purposes.**

For Flush mounting allow a minimum of 3mm all round (on overall unit dimensions for door clearance)

Some relieving of board and/or stud work may be required to finish door flush with surrounding panels. Alternatively pack surrounding panels to finish flush with door panel.

- › Recommended wall opening of 360w x 1113h x 114d
- › Recommended mounting height from underside of unit to FFL 315mm (Male Toilet).
- › Open doors by placing suction cup (supplied) on left hand side of door face and pulling open
- › Position the unit into the prepared wall recess allowing 6mm clearance all round for packing and adjustment
- › Fit temporary screws into the rectangular slots on the unit's sides (Do not over tighten, to allow for horizontal adjustment)
- › Fix casing to studwork using suitable screws (Fixing holes Ø6.5mm) and remove temporary screws from slots
- › Close doors

## CARE AND MAINTENANCE

---

Clean with soap and warm water, dry with a clean soft cloth.

To maintain finish of stainless steel parts use any industrial steel cleaner, polishing along the material grain with a clean soft cloth.

Dolphin Solutions recommends “Steel Clean” cleaning agent, obtainable from: Vitopan (Tel: 01204 863000)

**Never Use Corrosives - such as bleach or other cleaning products containing hypochlorite; Any form of acid solution or industrial cleaning solution; Bathroom cleaning products, developer liquids, concentrated disinfectants, strong alkalis or caustic soda;**

**Never Use Abrasives - such as wire wool; scouring pads;**

**Caution - Never use dirty or grit contaminated cleaning sponges or cloths**

## WARRANTY

---

This product is covered by a 12-month warranty from the date of purchase to be free from defects if installed and maintained in accordance with these instructions. Dolphin Solutions will replace or repair (as appropriate) free of charge any product with a proven manufacturing defect if reported within the warranty period.